


# General Assembly of Handle 07287-01000 and Umbilical 07287-01300

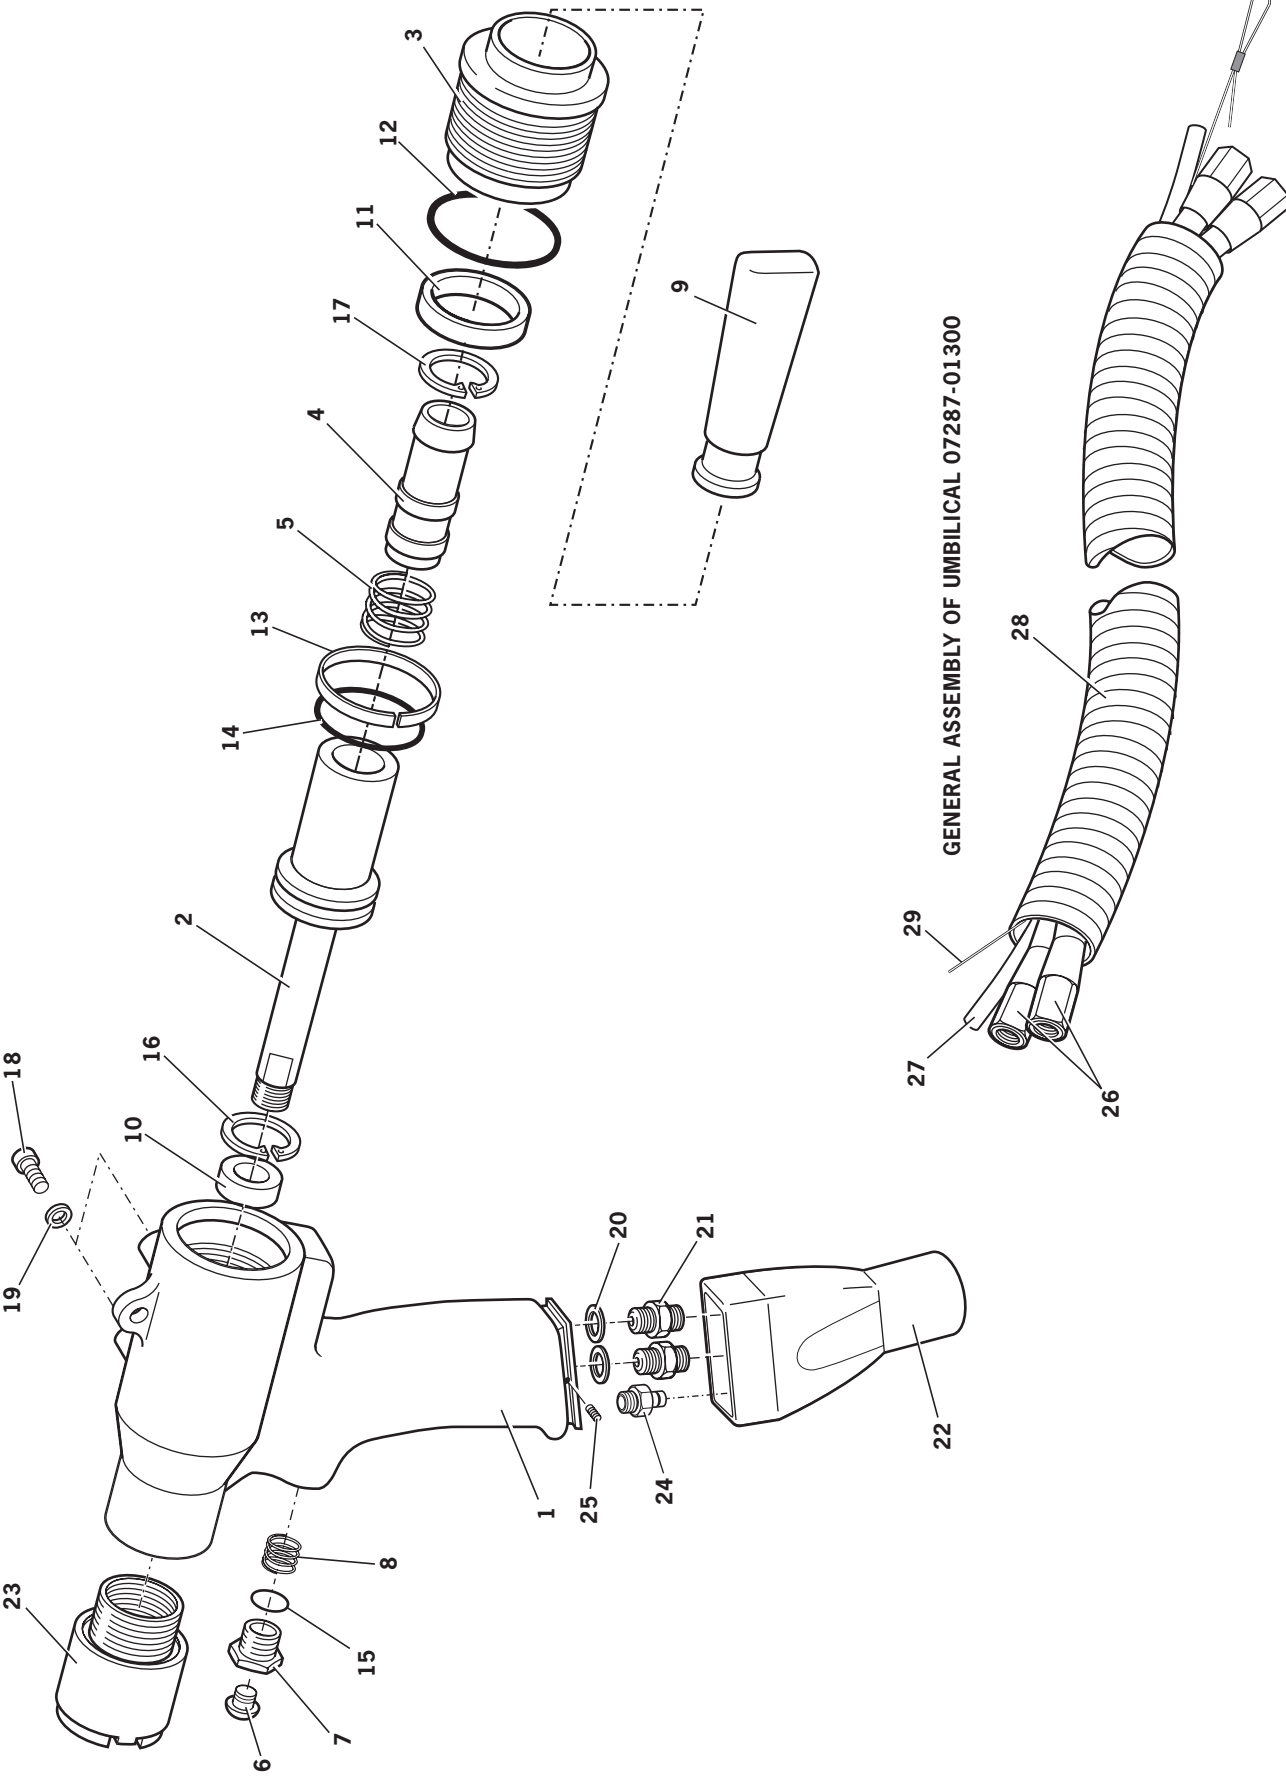


GENERAL ASSEMBLY OF UMBILICAL 07287-01300

# Parts List for 07287-01000 and 07287-01300

07287-01000 PARTS LIST									
ITEM	PART N°	DESCRIPTION	QTY	SPARES	ITEM	PART N°	DESCRIPTION	QTY	SPARES
1	07287-01001	HANDLE	1	-	14	07267-01014	'O' RING	1	-
2	07287-01002	PISTON	1	-	15	07555-00502	'O' RING	1	-
3	07287-01003	STOP COVER	1	-	16	07267-01016	CIRCLIP	1	-
4	07267-01004	DEFLECTOR SUPPORT	1	-	17	07267-01017	CIRCLIP	1	-
5	07267-01005	SPRING	1	-	18	07265-02010	BLEED SCREW	2	-
6	07265-03023	TRIGGER	1	-	19	07265-02011	WASHER	2	-
7	07265-03022	LOCKNUT	1	-	20	07265-02031	WASHER	2	-
8	07555-09219	SPRING	1	-	21	07267-01022	CONNECTOR	2	-
9	07220-00215	STEM DEFLECTOR	1	-	22	07267-01025	SLEEVE	1	-
10	07267-01010	LIP SEAL	1	-	23	07220-01500	HEAD EXTENSION	1	-
11	07267-01011	SEAL	1	-	24	07287-01004	AIR CONNECTOR	1	-
12	07267-01012	'O' RING	1	-	25	07287-01005	GRUB SCREW	1	-
13	07267-01013	GRAPHITE RING	1	-					

07287-01300 PARTS LIST									
ITEM	PART N°	DESCRIPTION	QTY	SPARES	ITEM	PART N°	DESCRIPTION	QTY	SPARES
26	07267-01301	3m OIL HOSE	2	-	28	07267-01302	3m PROTECTIVE SLEEVE	1	-
27	07265-02021	3m AIR HOSE	1	-	29	07287-01303	LANYARD	1	-


# General Assembly of Cabinet 07287-03200

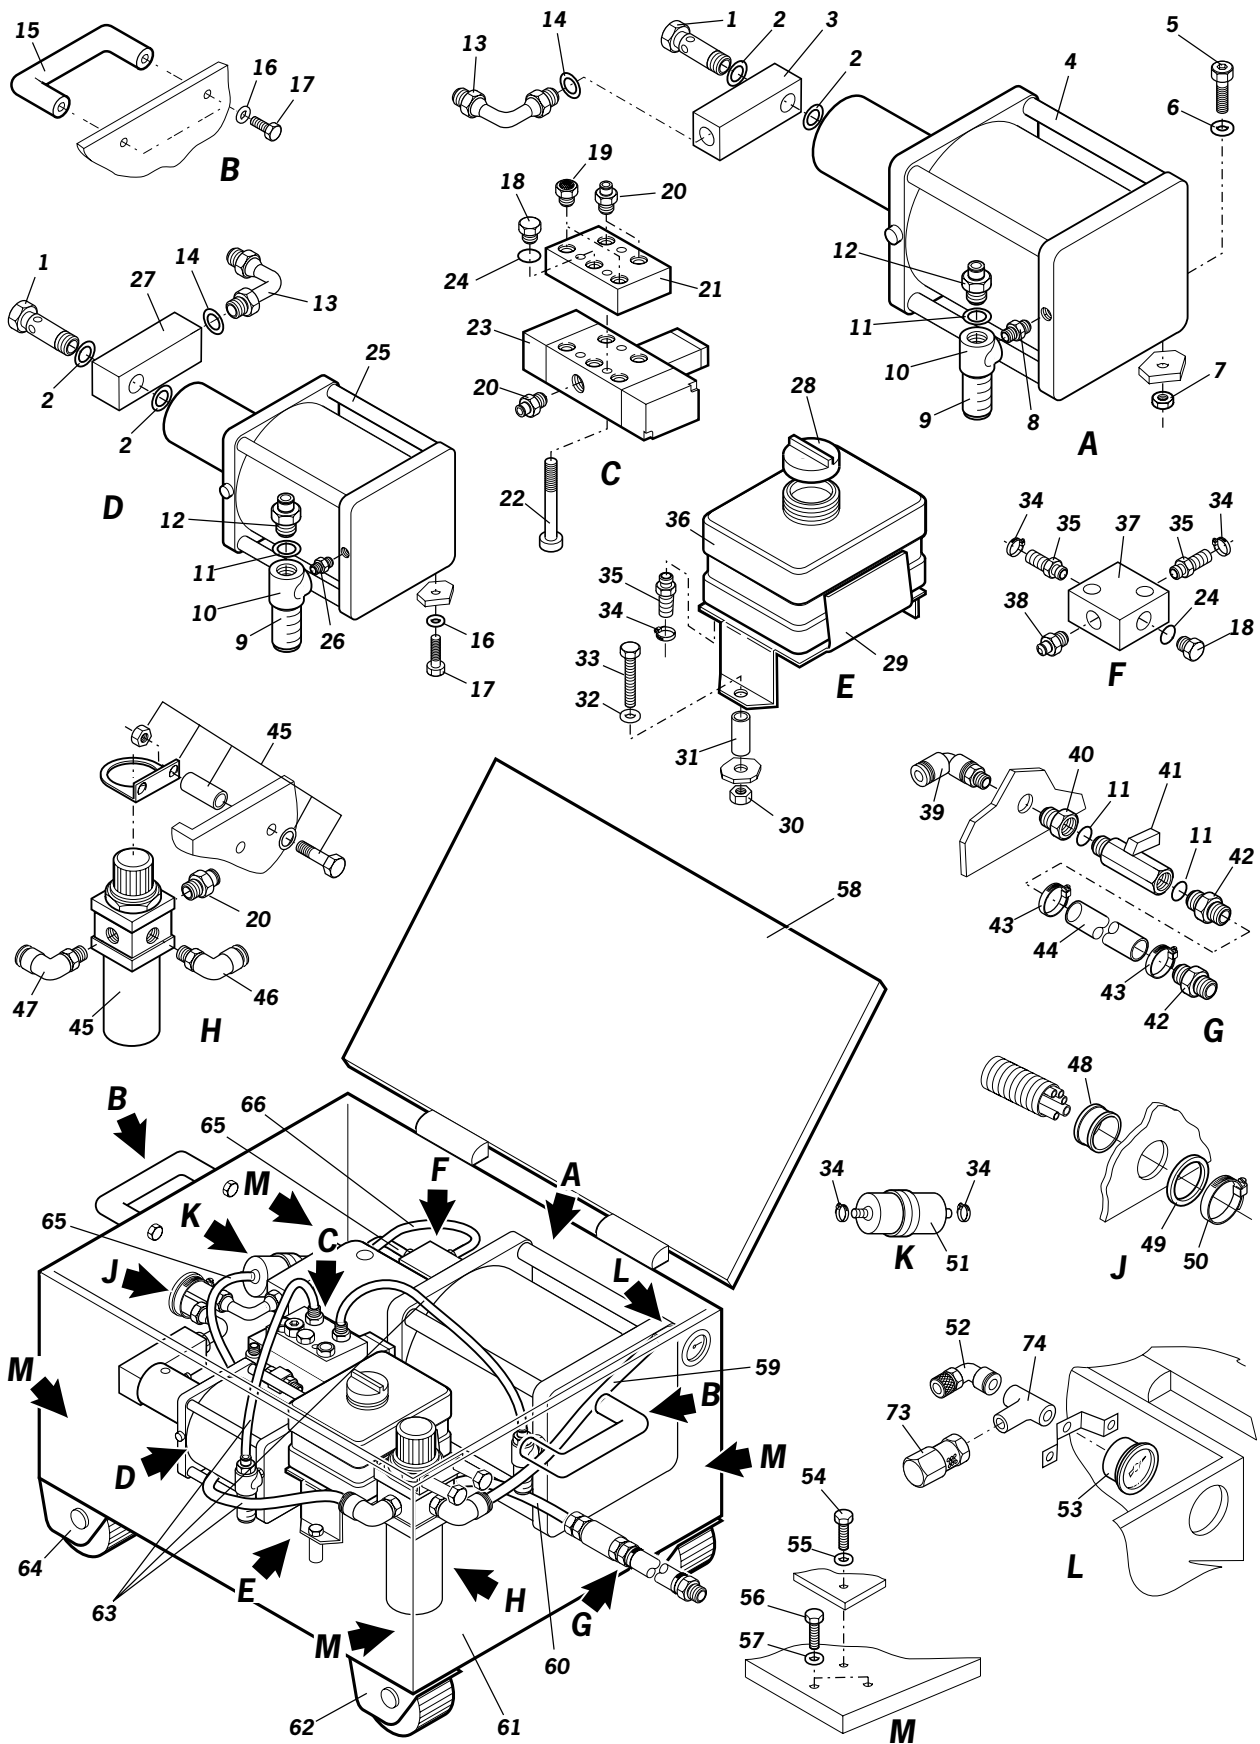

# Parts List of Cabinet 07287-03200

07287-03200 CABINET PARTS LIST									
ITEM	PART N°	DESCRIPTION	QTY	SPARES	ITEM	PART N°	DESCRIPTION	QTY	SPARES
1	07267-03224	SCREW	2	-	38	07267-03209	CONNECTOR	1	-
2	07265-03259	WASHER	4	-	39	07267-03262	ELBOW CONNECTOR	2	-
3	07267-03227	DISTRIBUTOR	1	-	40	07267-03263	BUSH	1	-
4	07005-10112	INTENSIFIER	1	-	41	07267-03264	AIR TUBE	1	-
5	07265-02267	BOLT	2	-	42	07265-03253	CONNECTOR	2	-
6	07625-02268	WASHER	2	-	43	07265-02076	CLAMP	2	-
7	07265-02269	NUT	2	-	44	07265-03219	AIR HOSE (2500mm)	1	-
8	07265-03260	CONNECTOR	1	-	45	07265-03220	PRESSURE REG & FILTER ASSY	1	-
9	07265-03263	SILENCER	2	-	46	07265-03256	ELBOW CONNECTOR	1	-
10	07265-03225	QUICK EXHAUST	2	-	47	07265-03257	ELBOW CONNECTOR	1	-
11	07265-03261	WASHER	5	-	48	07267-03251	RING	1	-
12	07267-03204	HOSE CONNECTOR	2	-	49	07267-03252	WASHER	1	-
13	07267-03226	ELBOW CONNECTOR	2	-	50	07265-03292	CLAMP	1	-
14	07265-02031	WASHER	2	-	51	07267-03212	OIL FILTER	1	-
15	07265-03202	HANDLE	2	-	52	07265-03255	ELBOW CONNECTOR	1	-
16	07265-02284	WASHER	6	-	53	07265-03254	AIR PRESSURE INDICATOR ASSY	1	-
17	07265-02283	SCREW	4	-	54	07265-03231	SCREW	4	-
18	07267-03208	PLUG	2	-	55	07265-03232	WASHER	4	-
19	07265-03270	SILENCER	2	-	56	07265-03205	SCREW	8	-
20	07265-03271	STRAIGHT CONNECTOR	4	-	57	07265-03204	WASHER	8	-
21	07265-03222	SUB BASE	2	-	58	07265-03201	BOX (inc. KEY)	1	-
22	07265-03266	SCREW	3	-	59	07265-03216	6mm AIR HOSE (270mm)	1	-
23	07005-01524	VALVE	1	-	60	07265-03215	10mm AIR HOSE (100mm)	1	-
24	07265-03268	WASHER	2	-	61	07265-03230	BASE PLATE	1	-
25	07005-10113	INTENSIFIER	1	-	62	07265-03203	WHEEL	2	-
26	07267-03221	CONNECTOR	1	-	63	07267-03268	10mm AIR HOSE (450mm)	3	-
27	07267-03222	DISTRIBUTOR	1	-	64	07265-03207	WHEEL	2	-
28	07267-03213	OIL RESERVOIR PLUG	1	-	65	07267-03265	OIL HOSE (400mm)	2	-
29	07267-03215	OIL RESERVOIR BASE	1	-	66	07267-03266	OIL HOSE (200mm)	1	-
30	07267-03219	NUT	2	-	67	07267-03267	OIL HOSE	1	NOT SHOWN
31	07267-03217	SPACER	2	-	68	07267-03271	10mm AIR HOSE	1	NOT SHOWN
32	07267-03218	WASHER	2	-	69	07267-03272	6mm AIR HOSE	1	NOT SHOWN
33	07267-03216	BOLT	2	-	70	07265-03272	WASHER	5	NOT SHOWN
34	07267-03211	CLAMP	6	-	71	07265-03273	WASHER	8	NOT SHOWN
35	07267-03210	HOSE CONNECTOR	4	-	72	07265-03206	NUT	8	NOT SHOW
36	07267-03214	OIL RESERVOIR	1	-	73	07287-03280	SAFETY VALVE	1	-
37	07267-03207	OIL DISTRIBUTOR	1	-	74	07287-03281	'T' CONNECTOR	1	-


# General Assembly of Push Intensifier 07005-10113

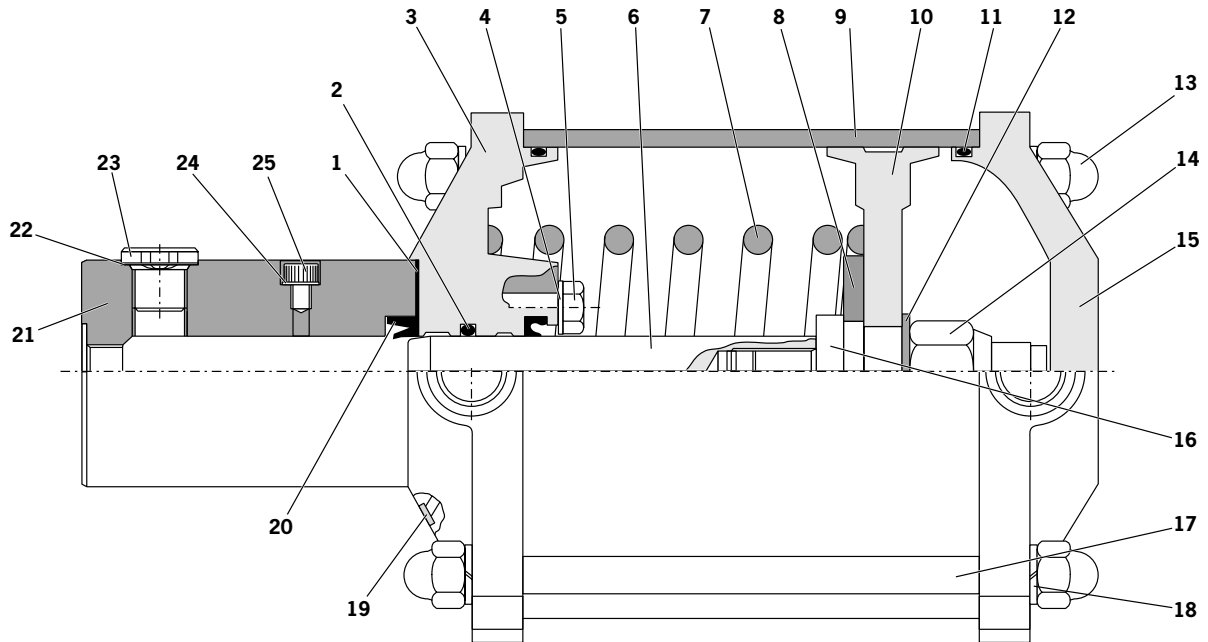

## Parts List of Push Intensifier 07005-10113

07005-10113 PUSH INTENSIFIER PARTS LIST									
ITEM	PART N°	DESCRIPTION	QTY	SPARES	ITEM	PART N°	DESCRIPTION	QTY	SPARES
1	07267-08119	SEAL	4	-	14	07267-08015	LOCKNUT	1	-
2	07267-08104	SEAL	1	-	15	07267-08116	REAR FLANGE	1	-
3	07267-08107	FRONT FLANGE	1	-	16	07267-08130	ROD EXTENSION	1	-
4	07267-08125	WASHER	4	-	17	07287-08114	TENSION ROD	4	-
5	07267-08106	SCREW	4	-	18	07267-08126	SPRING WASHER	8	-
6	07287-08109	ROD	1	-	19	07267-08122	FILTER	1	-
7	07267-08134	SPRING	1	-	20	07267-08103	SEAL	1	-
8	07267-08133	SPRING GUIDE	1	-	21	07287-08102	STEEL HEAD	1	-
9	07287-08117	PNEUMATIC CYLINDER	1	-	22	07267-08128	WASHER	1	-
10	07267-08110	PISTON	1	-	23	07267-08101	PLUG	1	-
11	07267-08031	WASHER	1	-	24	07267-08123	WASHER	1	-
12	07267-08112	SEAL	1	-	25	07267-08121	BLEED SCREW	1	-
13	07267-08113	BLIND NUT	8	-	26	07267-08135	FILTER	1	NOT SHOWN

# General Assembly of Pull Intensifier 07005-10112

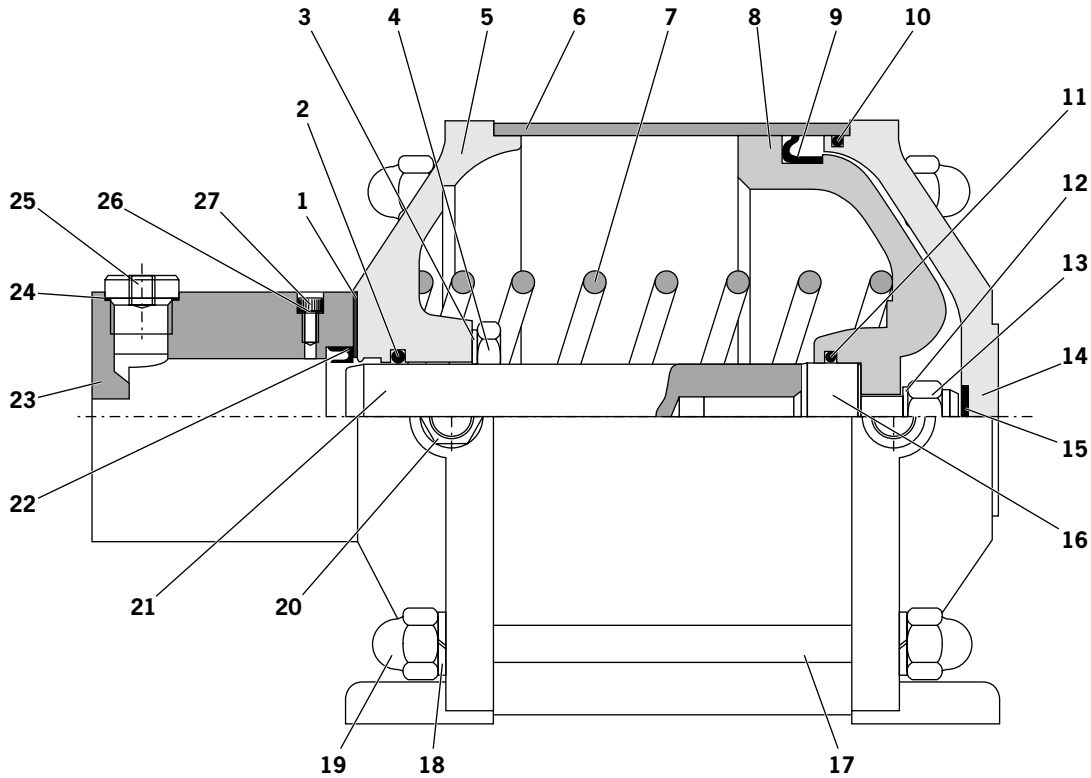

## Parts List of Pull Intensifier 07005-10112

07005-10112 PULL INTENSIFIER PARTS LIST									
ITEM	PART N°	DESCRIPTION	QTY	SPARES	ITEM	PART N°	DESCRIPTION	QTY	SPARES
1	07267-08019	SEAL	4	-	15	07267-08035	SHOCK ABSORBER	1	-
2	07287-08004	SEAL	1	-	16	07267-08032	ROD EXTENSION	1	-
3	07267-08022	WASHER	4	-	17	07287-08014	TENSION ROD	4	-
4	07267-08006	SCREW	4	-	18	07267-08026	SPRING WASHER	8	-
5	07287-08007	FRONT FLANGE	1	-	19	07267-08013	BLIND NUT	8	-
6	07287-08017	PNEUMATIC CYLINDER	1	-	20	07267-08033	FILTER	1	-
7	07287-08008	SPRING	1	-	21	07287-08009	ROD	1	-
8	07267-08010	PISTON	1	-	22	07287-08003	SEAL	1	-
9	07267-08011	PISTON SEAL	1	-	23	07287-08002	STEEL HEAD	1	-
10	07267-08012	SEAL	1	-	24	07267-08030	WASHER	1	-
11	07267-08020	SEAL	1	-	25	07267-08029	PLUG	1	-
12	07267-08031	WASHER	1	-	26	07267-08034	WASHER	1	-
13	07267-08015	LOCKNUT	1	-	27	07267-08021	BLEED SCREW	1	-
14	07267-08016	REAR FLANGE	1	-					