
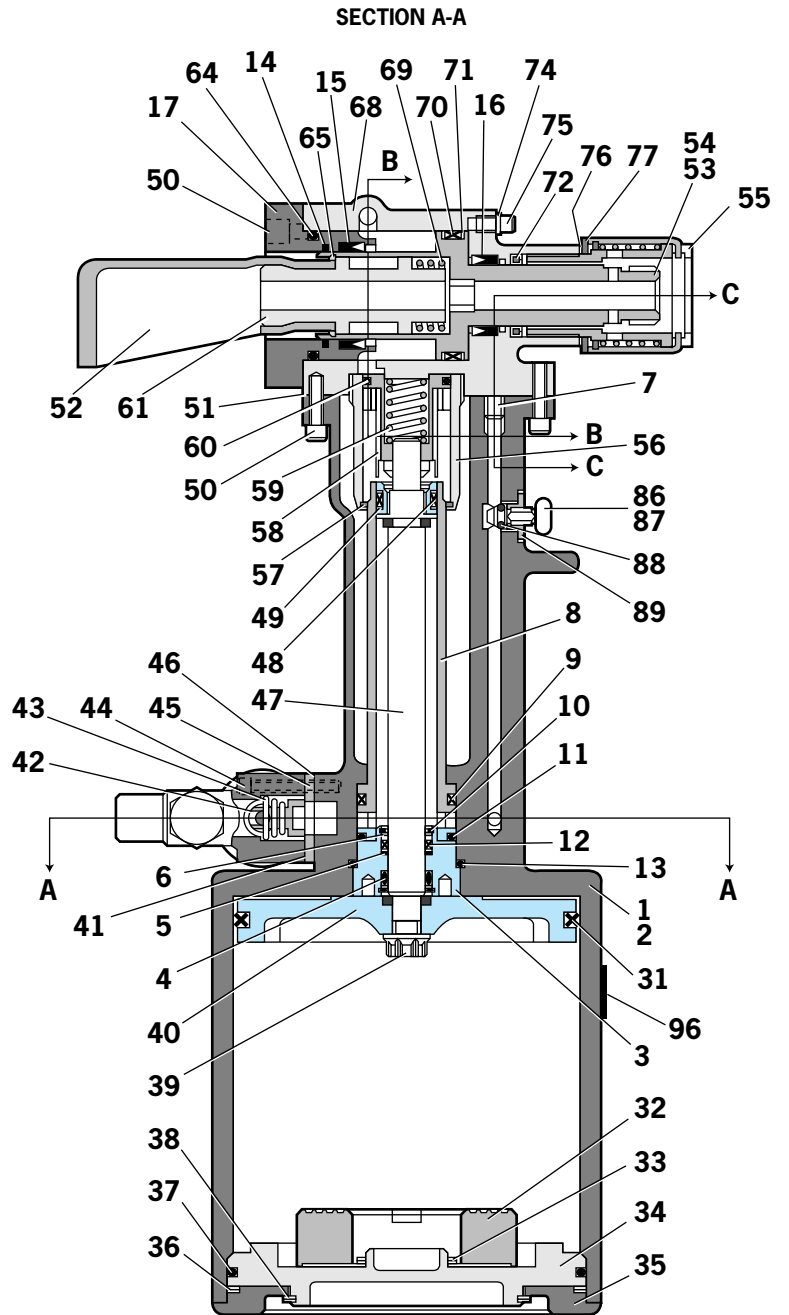
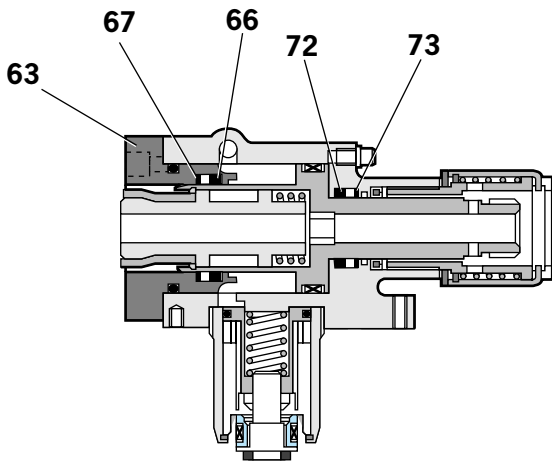
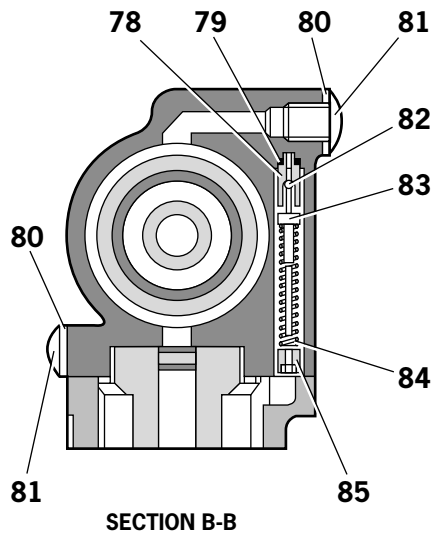


# General Assembly of Base Tool 07220-00200

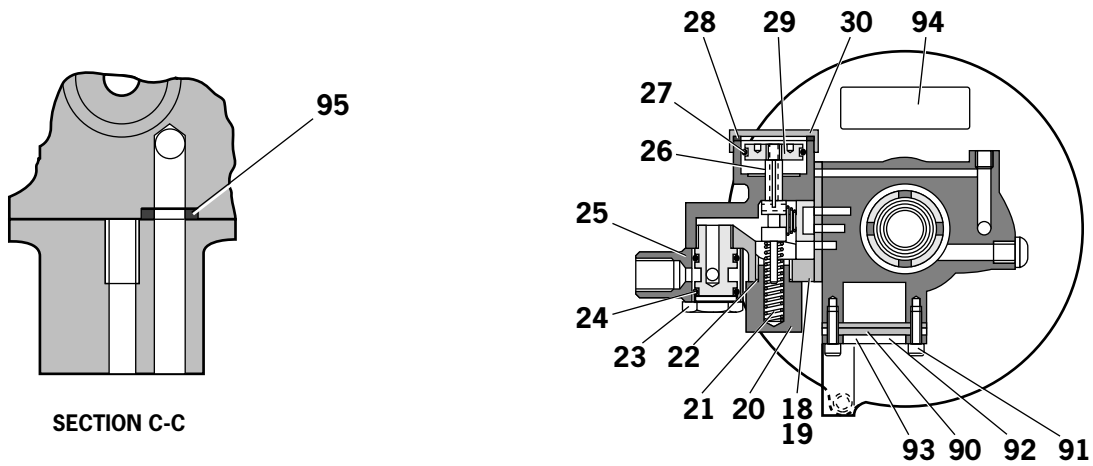

# Parts List for 07220-00200

07220-00200 PARTS LIST									
ITEM	PART N°	DESCRIPTION	QTY	SPARES	ITEM	PART N°	DESCRIPTION	QTY	SPARES
1	07220-07300	HANDLE ASSEMBLY	1	-	50	07001-00001	SCREW	12	24
2	07220-01600	• HANDLE	1	-	51	07220-00201	GASKET	1	5
3	07220-00304	• PACKING PLUG	1	1	52	07220-00215	DEFLECTOR	1	10
4	07003-00058	• 'O' RING	1	10	53	07220-00400	HEAD ASSEMBLY	1	-
5	07003-00006	• ANTI - EXTRUSION RING	1	5	54	07220-00403	• HEAD PISTON	1	-
6	07220-00306	• WASHER	2	10	55	07220-01500	• HEAD EXTENSION ASSEMBLY	1	-
7					56	07220-00414	• RETURN CYLINDER	1	-
8	07220-00303	• POWER CYLINDER	1	-	57	07004-00004	• RETAINING RING	1	-
9	07003-00003	• SEAL	1	10	58	07220-00416	• RETURN PISTON	1	-
10	07004-00002	• RETAINING RING	2	5	59	07220-00417	• SPRING	1	5
11	07003-00064	• 'O' RING	1	10	60	07003-00012	• 'O' RING	1	10
12	07003-00005	• SEAL	1	10	61	07220-00405	• DEFLECTOR FITTING	1	-
13	07003-00004	• 'O' RING	1	5	62				
14	07003-00380	WIPER RING	1	5	63	07220-00425	• HEAD CAP	1	-
15	07003-00378	LIP SEAL	1	5	64	07003-00068	• 'O' RING	1	5
16	07003-00379	LIP SEAL	1	5	65	07004-00003	• RETAINING RING	1	10
17	07220-00430	HEAD CAP	1	-	66	07003-00117	• SEAL	1	5
18	07220-00500	VALVE ASSEMBLY	1	-	67	07003-00118	• SEAL	1	5
19	07220-00511	• VALVE BLOCK	1	-	68	07220-01400	• HEAD SUB - ASSEMBLY	1	-
20	07220-00507	• VALVE STOP	1	-	69	07220-00415	• SPRING	1	5
21	07220-00506	• SPRING	1	2	70	07003-00007	• SEAL	1	10
22	07003-00017	• 'O' RING	1	5	71	07003-00008	• ANTI - EXTRUSION RING	2	5
23	07220-00509	• SWIVEL BOLT	1	-	72	07003-00115	• SEAL	2	10
24	07003-00105	• 'O' RING	2	5	73	07003-00116	• SEAL	1	5
25	07220-00508	• SWIVEL	1	-	74	07220-00424	• WASHER	1	15
26	07220-00503	• VALVE SHAFT	1	-	75	07001-00089	• SCREW	1	-
27	07003-00147	• 'O' RING	1	10	76	07220-00409	• SHIM	1	10
28	07220-00512	• GASKET	1	5	77	07220-00407	• THRUST WASHER	1	5
29	07220-00504	• VALVE PISTON	1	-	78	07220-00411	• BALL SEAT	1	-
30	07220-00505	• VALVE CYLINDER CAP	1	-	79	07003-00011	• SEAL	1	5
31	07003-00020	SEAL	1	5	80	07003-00099	• SEAL	2	10
32	07220-01100	BUFFER ASSEMBLY	1	1	81	07001-00008	• SCREW	2	10
33	07004-00035	RETAINING RING	1	-	82	07007-00043	• BALL	1	5
34	07220-00220	HANDLE BASE	1	-	83	07220-00429	• SPRING GUIDE	1	2
35	07220-00222	BASE COVER	1	-	84	07220-00428	• SPRING	1	5
36	07004-00001	RETAINING RING	1	-	85	07220-00420	• PRESSURE REGULATING SCREW	1	5
37	07003-00002	'O' RING	1	10	86	07220-00800	TRIGGER ASSEMBLY	1	-
38	07004-00034	RETAINING RING	1	-	87	07220-00801	• TRIGGER	1	-
39	07002-00017	NUT	1	5	88	07003-00022	• 'O' RING	1	10
40	07220-01300	AIR PISTON SUB - ASSEMBLY	1	-	89	07220-00803	• TRIGGER SLEEVE	1	-
41	07220-00208	GASKET	1	5	90	07220-00227	GASKET	1	5
42	07220-00202	SLIDE VALVE	1	-	91	07001-00109	SCREW	2	10
43	07220-00204	SPRING	1	1	92	07220-00225	COVER PLATE	1	1
44	07001-00002	SCREW	4	12	93	07220-00226	SILENCER	1	1
45	07220-00206	VALVE SEAT	1	-	94	07220-00216	LABEL	1	-
46	07220-00205	GASKET	1	5	95	07003-00001	'O' RING	1	10
47	07220-01200	PISTON ASSEMBLY	1	-	96	07220-00217	TRANSFER	1	-
48	07003-00018	SEAL	1	5					
49	07003-00019	ANTI - EXTRUSION RING	2	5					